



How to Prolink Tape


Application of Prolink dry adhesive tape system

The correct method of applying Prolink tape to a glazing cassette.

Always refer to full glazing guide.

We can see that the red circle is showing a tiny gap between horizontal and vertical sealing tape which can result in water ingress, this joint is incorrect.

The green circle shows correct way to joint (however there is a visible small gap between connections) this joint needs to meet, see below image.

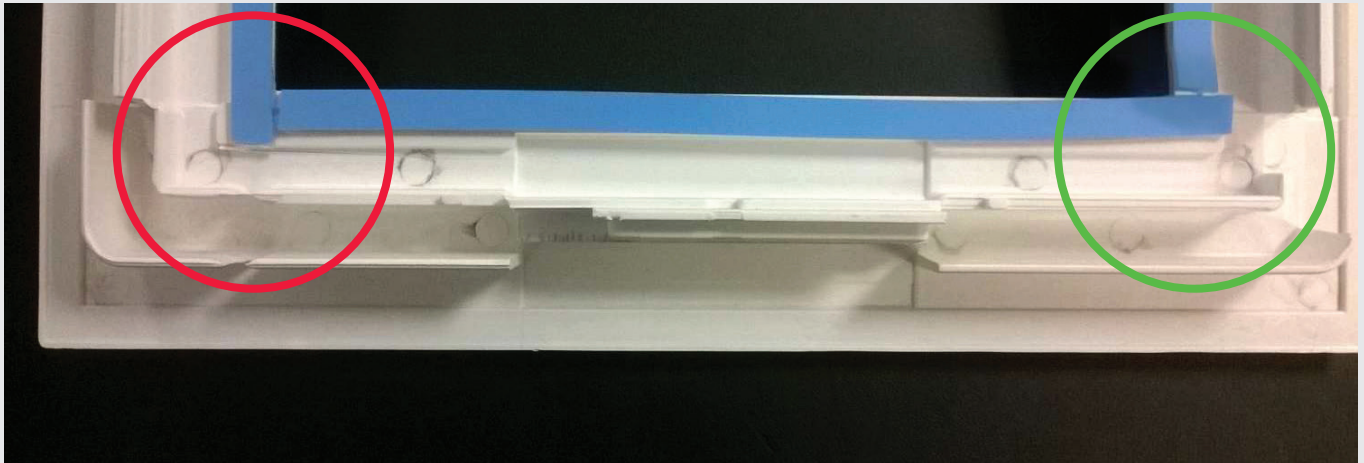

The correct way to apply sealing tape is to always start applying tapes to all horizontal edges, then apply the vertical tapes as shown on picture below, ensuring that the edges of the tape meet, this way when pressure is applied the adhesive will wet into itself and create an excellent long term weather seal. Always refer to our recommended glazing instructions.

